

OCTAVE MAD	C	C#	D	D#	E	F	F#	G	G#	A	A#	B	PIANO ROLL
	TRACK 1	TRACK 2	TRACK 3	TRACK 4	MADE BY KIII	TRACK 5	TRACK 6	TRACK 7	TRACK 8	SEQ STOP	SEQ START/STOP	SEQ RESTART	TRANSPORT
-1	0	1	2	3	4	5	6	7 TRACK LEVEL - / X	8 TRACK BAL - / X	9	10	11	TOGGLED CC 0 - OFF/C-1/All Audio 6C 1-127 - ON/E-9/ TEN - X / DEC - X
0	12	13	14	15	16 PLAYBACK PARA #1 X / X	17 PLAYBACK PARA #2 X / X	18 PLAYBACK PARA #3 X / X	19 PLAYBACK PARA #4 X / X	20 PLAYBACK PARA #5 X / X	21 PLAYBACK PARA #6 X / X	22 AMP #1 (ATTACK) X / X	23 AMP #2 (HOLD) X / X	
1	24	25	26	27	28	29	30	31	32	33	34	35	TRACK TRIGS
	AMP #3 (RELEASE) X / X	AMP #4 (VOLUME) X / X	AMP #5 (BALANCE) X / X	AMP #6 (X VOLUME) X / X	LFO #1 (SPEED 1) X / X	LFO #2 (SPEED 2) X / X	LFO #3 (SPEED 3) X / X	LFO #4 (DEPTH 1) X / X	LFO #5 (DEPTH 2) X / X	LFO #6 (DEPTH 3) X / X	FX / MIDI 1 PARA #1 X / X	FX / MIDI 1 PARA #2 X / X	
2	36	37	38	39	40	41	42	43	44	45	46	47	SAMPLE TRIGS
	FX / MIDI 1 PARA #3 X / X	FX / MIDI 1 PARA #4 X / X	FX / MIDI 1 PARA #5 X / X	FX / MIDI 1 PARA #6 X / X	FX / MIDI 2 PARA #1 X / X	FX / MIDI 2 PARA #2 X / X	FX / MIDI 2 PARA #3 X / X	FX / MIDI 2 PARA #4 X / X	FX / MIDI 2 PARA #5 X / X	FX / MIDI 2 PARA #6 X / X	TRACK LEVEL X / X	CUE LEVEL X / X	
3	48	49	50	51	52	53	54	55	56	57	58	59	MIDI TRACK TRIGS
	CROSSFADER X / X	TRACK MUTE X / X	TRACK SOLO X / X	TRACK CUE X / X	TRACK SOLO X / X	RECORDER ARM X / X	ARM ALL X / X	SCENE A SELECT X / X	SCENE B SELECT X / X	PICKUP SRC AB LVL - / X	PICKUP SRC CD LVL - / X	NOTE ON - / X	
4	COMBO REC	INAB REC	INCD REC	SRC3 REC	PICKUP PLAY/STOP	MULTIPLY	MUTE ACTIVE TRACK	CUE ACTIVE TRACK	TRACK UP	TRACK DOWN	TOGGLE SEQ SYNC	SEQ SYNC+START	AUTO CH CTLS
	60	61	62	63	64	65	66	67	68	69	70	71	TRACK DECS PICKUP MACHINE
	NOTE OFF - / X	SEND REQUEST - / X											
5	72	73	74	75	76	77	78	79	80	81	82	83	CHROMATIC TRIG CH - / OCTAVE 1
6	84	85	86	87	88	89	90	91	92	93	94	95	CHROMATIC TRIG CH - / OCTAVE 2
7	96	97	98	99	100	101	102	103	104	105	106	107	CHROMATIC TRIG CH - / OCTAVE 3
8	108	109	110	111	112 MIDI TRACK 1 MUTE X / X	113 MIDI TRACK 2 MUTE X / X	114 MIDI TRACK 3 MUTE X / X	115 MIDI TRACK 4 MUTE X / X	116 MIDI TRACK 5 MUTE X / X	117 MIDI TRACK 6 MUTE X / X	118 MIDI TRACK 7 MUTE X / X	119 MIDI TRACK 8 MUTE X / X	
	120	121	122	123	124	125	126	127					
9	MIDI TRACK 1 SOLO X / X	MIDI TRACK 2 SOLO X / X	MIDI TRACK 3 SOLO X / X	MIDI TRACK 4 SOLO X / X	MIDI TRACK 5 SOLO X / X	MIDI TRACK 6 SOLO X / X	MIDI TRACK 7 SOLO X / X	MIDI TRACK 8 SOLO X / X					